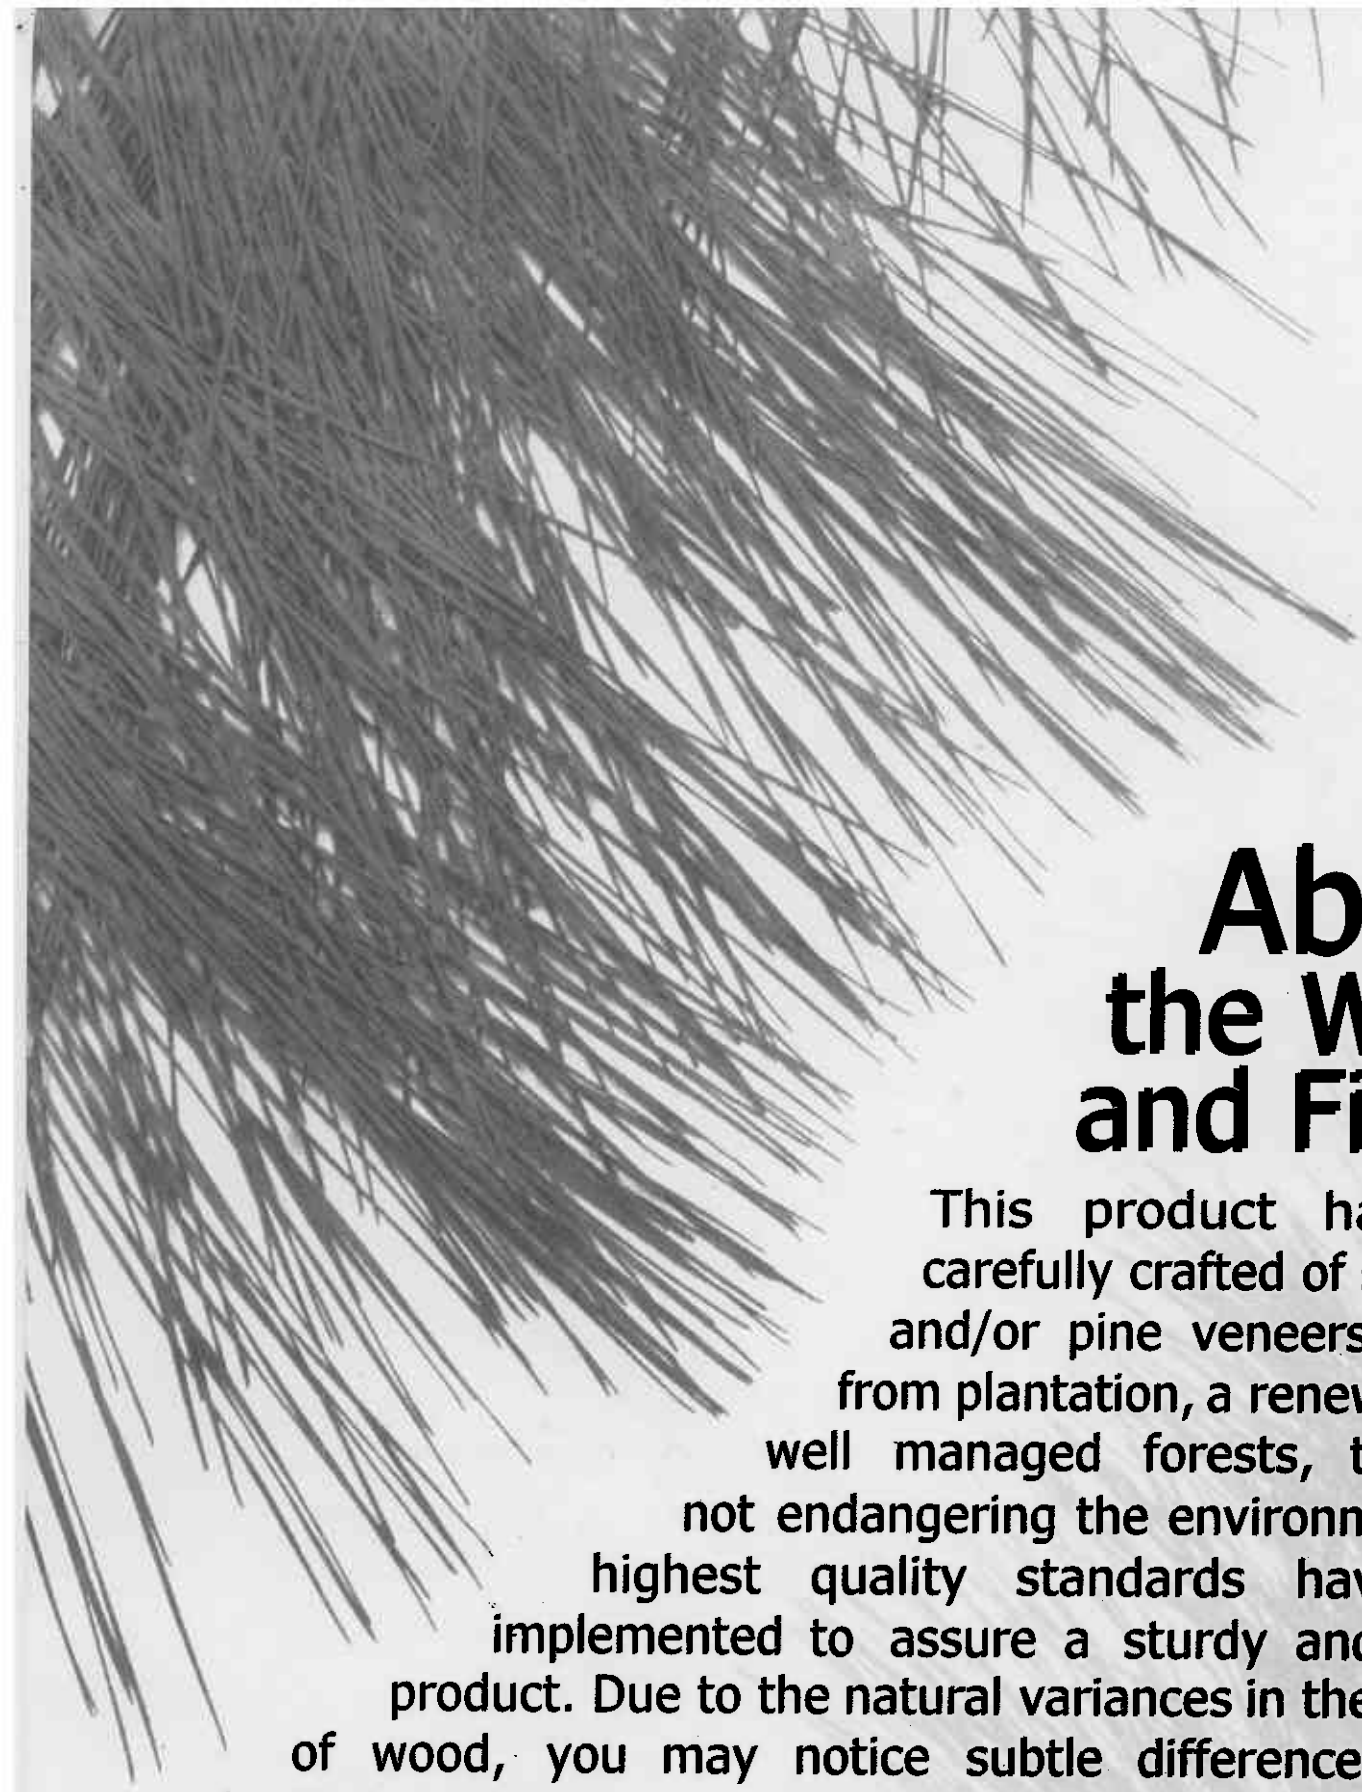

About the Wood and Finish

This product has been carefully crafted of solid pine and/or pine veneers, coming from plantation, a renewable and well managed forests, therefore, not endangering the environment. The highest quality standards have been implemented to assure a sturdy and reliable product. Due to the natural variances in the graining of wood, you may notice subtle differences in the shading and tone of the color stain and also some small cracks. This is not a defect but rather a result of the natural beauty of the wood itself. Care and maintenance: dust when needed using a smooth , dry cloth. Household furniture polish can be used occasionally to restore luster.

HAWTHORNE 8 DRAWER WIDE DRESSER

SKU# 2049100120 - (DARK CHERRY)
SKU# 2049100410 - (WHITE)
SKU# 2049100550 - (OAK)

Before beginning assembly, check to make sure all parts and hardware are accounted for. It is suggested that you save the carton and packing material until after assembly is completed. Select a clean, smooth surface to work (such as a carpet). Then, follow the easy steps below.

* MADE IN BRAZIL
16 02 11 6

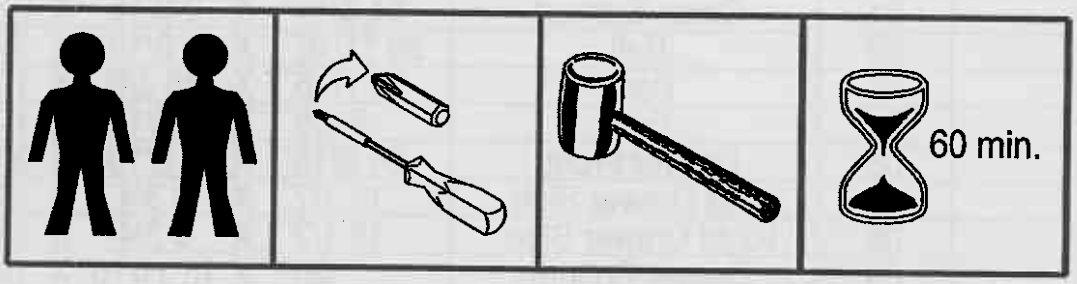

IF PARTS ARE MISSING PLEASE CALL "1-800-998-7021" FOR INFORMATION

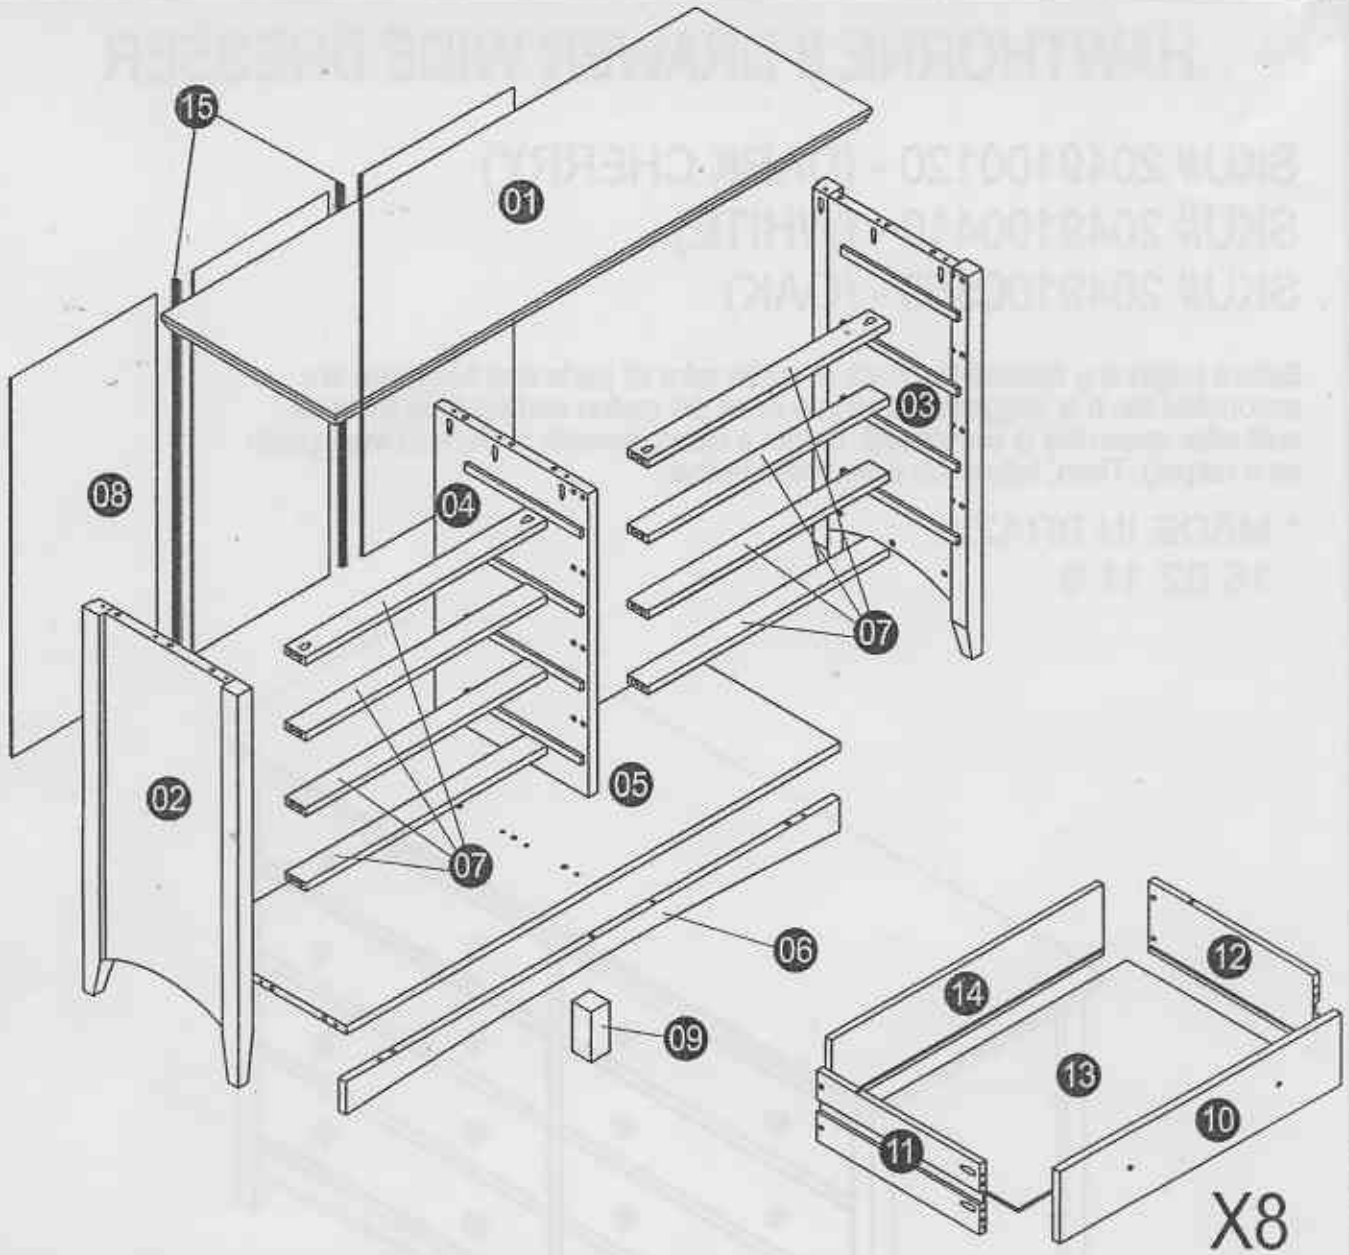

Part#	Qty	Description	Sizes (w x d x h)
01	01	Top	59 1/16" X 19" X 3/4"
02	01	Left Side	39 7/16" X 17 3/4" X 1 3/16"
03	01	Right Side	39 7/16" X 17 3/4" X 1 3/16"
04	01	Divider	33 1/4" X 17 1/2" X 3/4"
05	01	Bottom	54 3/16" X 17 1/2" X 3/4"
06	01	Cross Support	54 3/16" X 2 9/16" X 3/4"
07	08	Rail	26 11/16" X 1 9/16" X 3/4"
08	03	Back	34 7/16" X 18 3/8" X 1/8"
09	01	Feet	5 3/8" X 1 3/16" X 1 3/16"
10	08	Drawer Front	26 9/16" X 7 5/16" X 3/4"
11	08	Left Drawer Side	15 1/2" X 6 3/4" X 5/8"
12	08	Right Drawer Side	15 1/2" X 6 3/4" X 5/8"
13	08	Drawer Bottom	26" X 15 11/16" X 1/8"
14	08	Drawer Back	25 7/16" X 6 3/4" X 5/8"
15	02	Joining Strip	34 5/16" X 13/16" X 1/4"

A	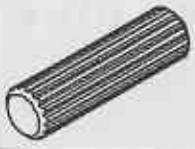 5/16" x 1 3/16"	101
B	3/16" x 1 3/8"	37
C	3/16" x 1 3/16"	80
D	1/16" x 7/8"	35
E	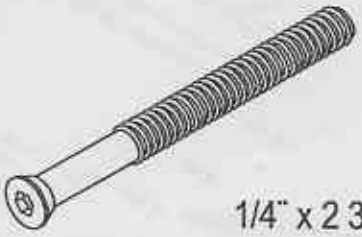 1/4" x 2 3/8"	01
F	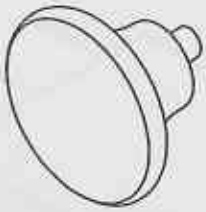	16
G	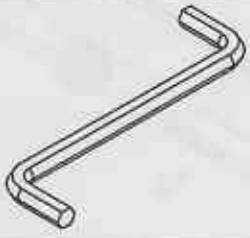	01

STEP 01

1. Insert wood dowels (A) into tops of left side (02) and right side (03)
Insert wood dowels (A) into top and bottom of center upright (04)
Insert wood dowels (A) into ends of drawer supports (07). Be sure to repeat this for all 8 drawer supports.
Insert wood dowels (A) into ends of bottom shelf (05)
Insert wood dowels (A) into side of front apron (06)
Insert wood dowels (A) into drawer sides (11) & (12). Be sure to repeat this for all 8 drawer sides.

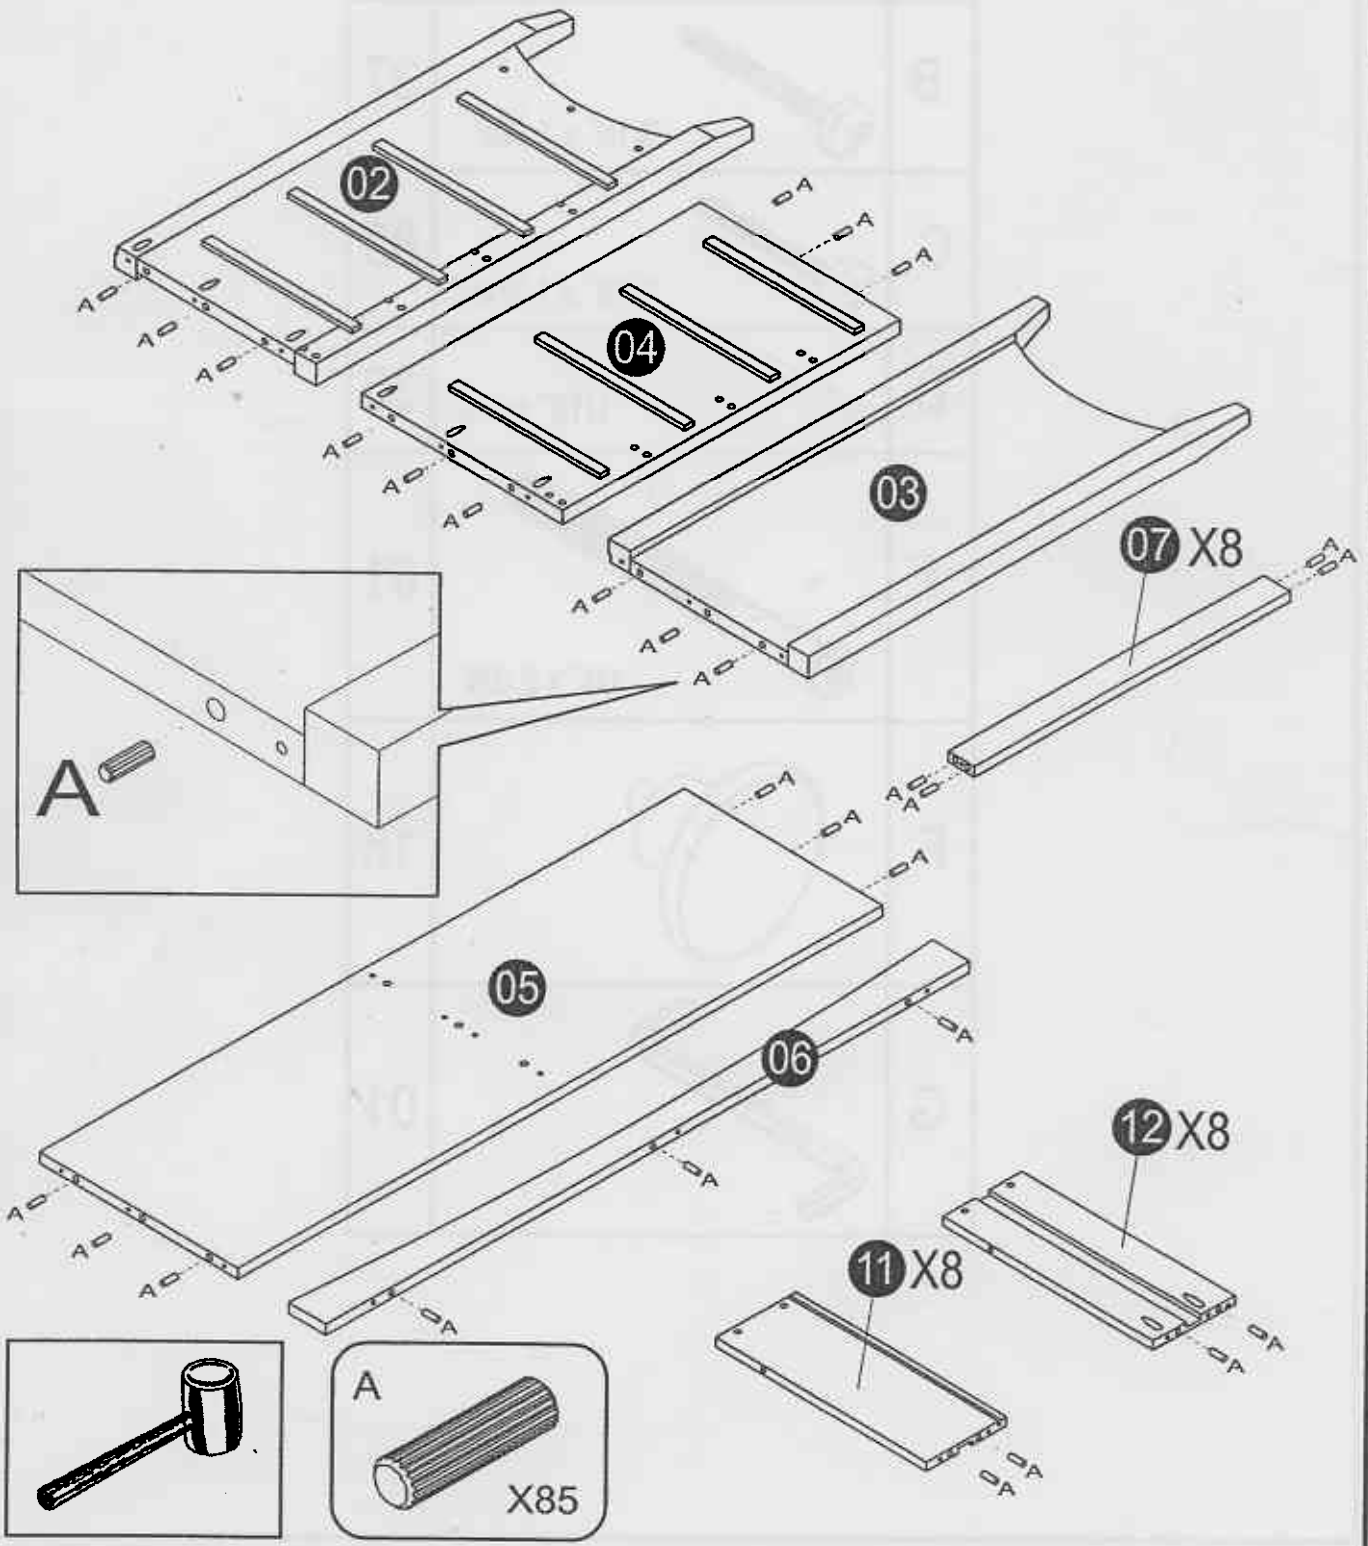

STEP 02

2. To help support your dresser, a wooden foot (09) is provided. Simply attach this to the underside of bottom shelf (05) as shown. Secure with screw (E), using allen key (G) as shown in the diagram.

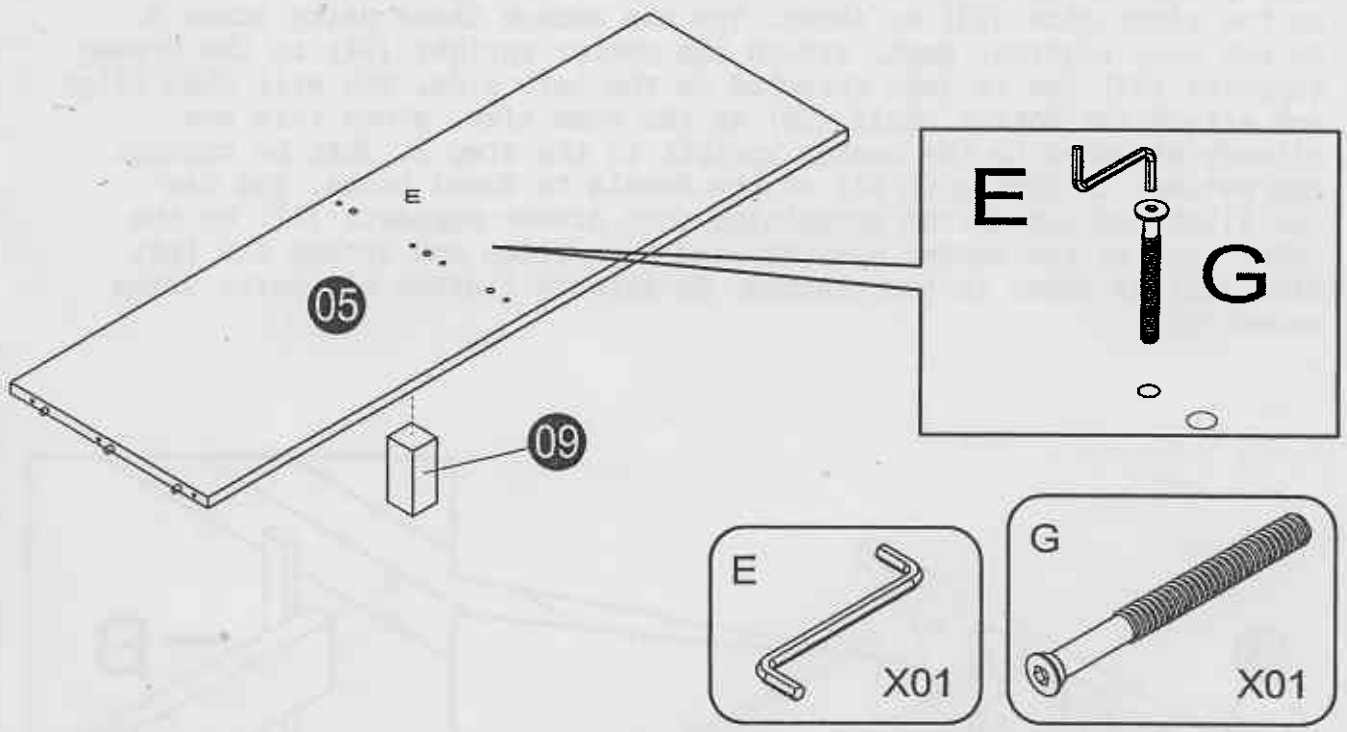

STEP 03

3. Now, turn the bottom shelf (05) on its side, and align the dowels of center upright (04) to the dowel holes of bottom shelf (05) as shown. Then secure using screw (B). Be sure to screw from the underside of bottom shelf (05).

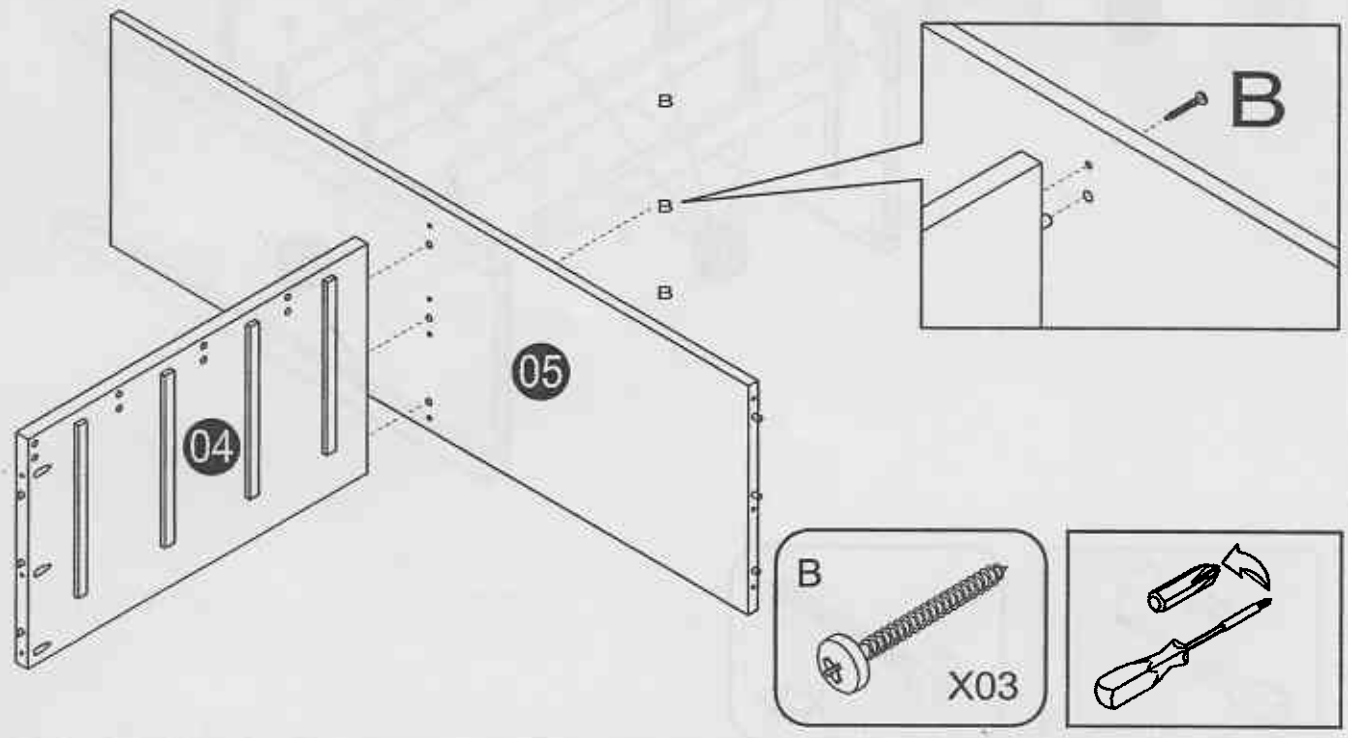

STEP 04

4. With all dowels inserted in step 1, you are now ready to assemble the frame of dresser.
First, attach all four of the drawer supports (07) into the holes provided on the right side (03) as shown. You can secure these using screw B. Do not over tighten. Next, attach the center upright (04) to the drawer supports (07) you're just attached to the left side. You will also align and attach the bottom shelf (05) at the same time, since this was already attached to the center upright in the step 3. Just be careful and patient in lining up all of the dowels to dowel holes. You can now aligh and attach the reimaining four drawer supports (07) to the other side of the center upright, and then align and attach the left side (02) as shown in the diagram. Be sure to tighten all parts using screw (B).

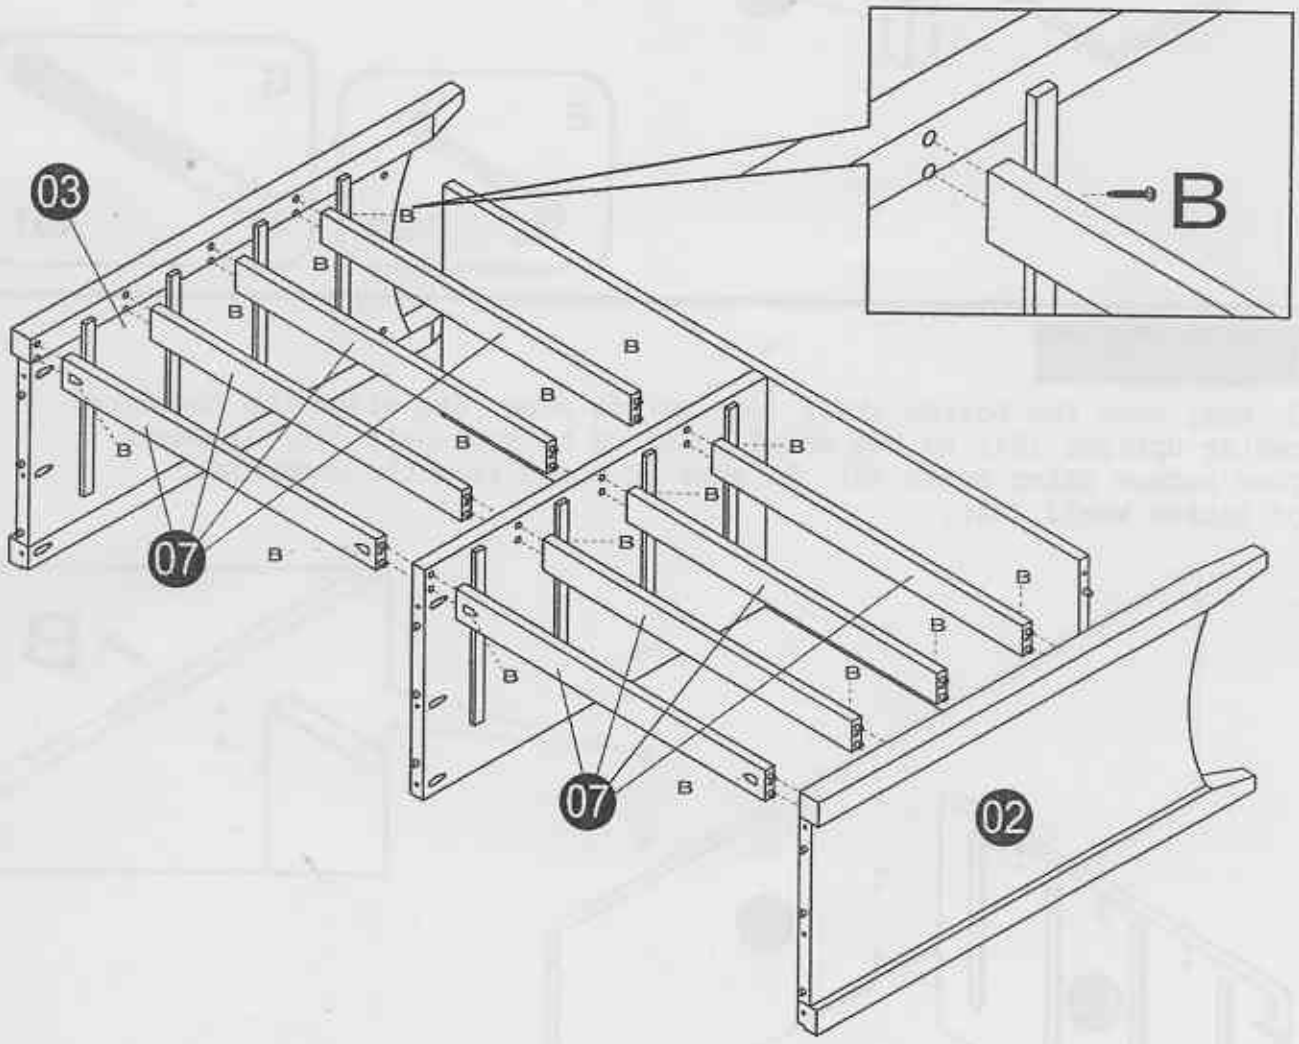

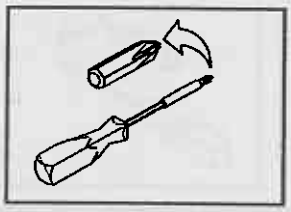

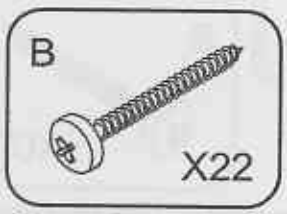

STEP 05

5. With your frame in place now, you can slide in and attach the front apron (06) as shown. If it does not fit in easily, do not force it - you may need to "loosen" some screws on the sides to allow some movement for the front apron to fit.

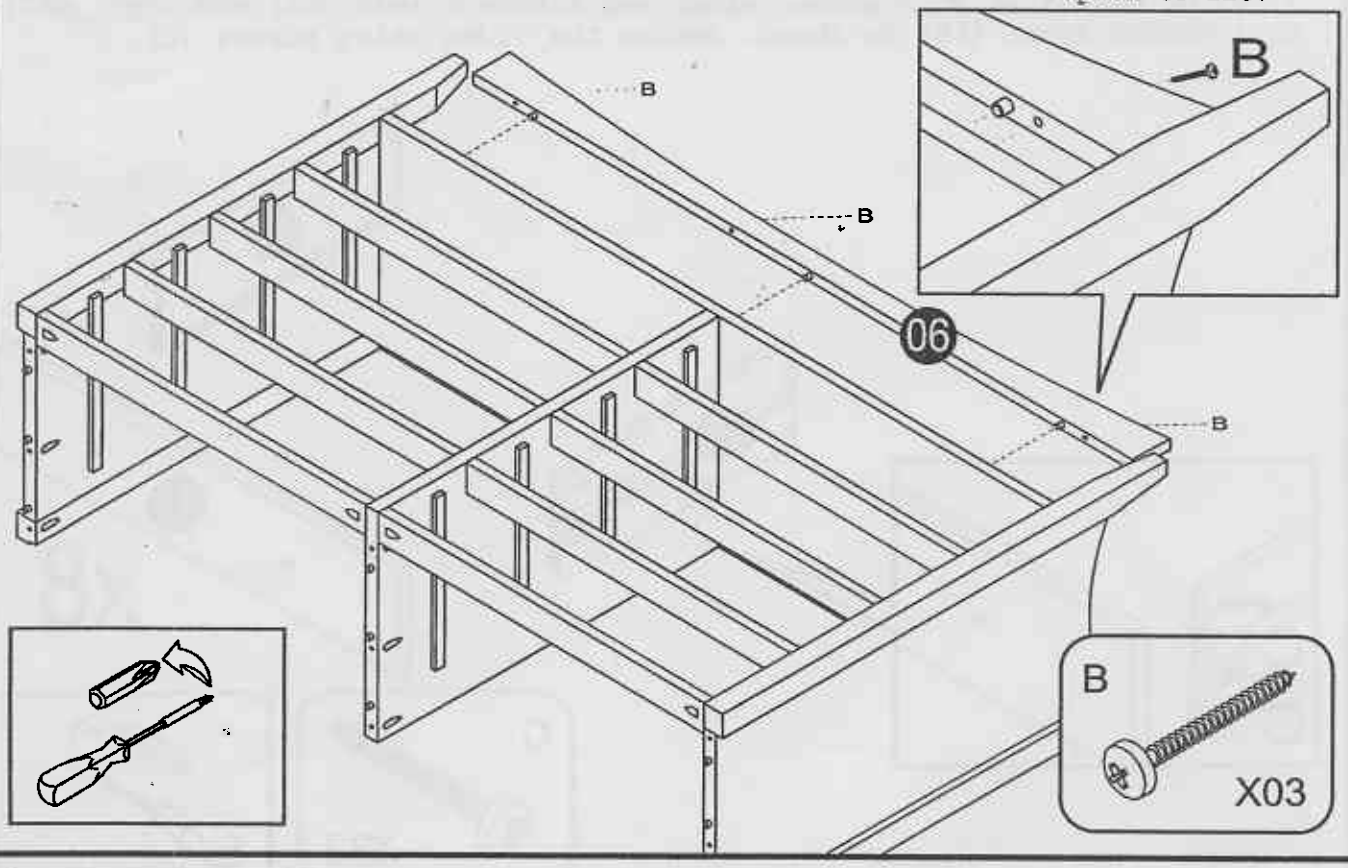

STEP 06

6. Now, using the dowels and holes as your guide, attach the top (01) as shown. Here, you need to secure the top using screw (B) from the underside of the top shelf. Do not over tighten. You do not want to punch through the top.

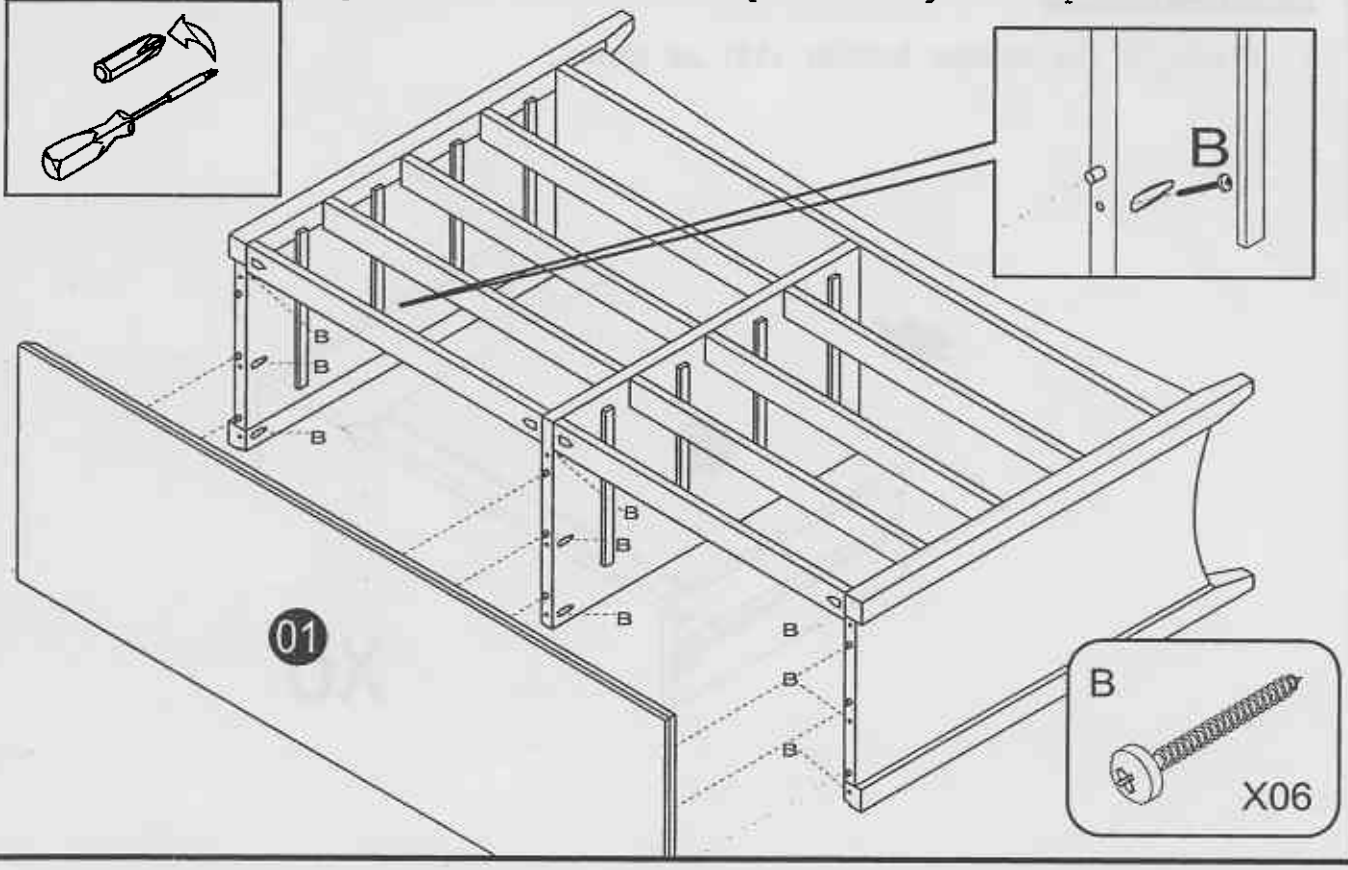

STEP 07

7. Using dowels as your guide, align and attach a left (11) and right (12) to a drawer front (10) as shown. Secure the sides using screws (C).

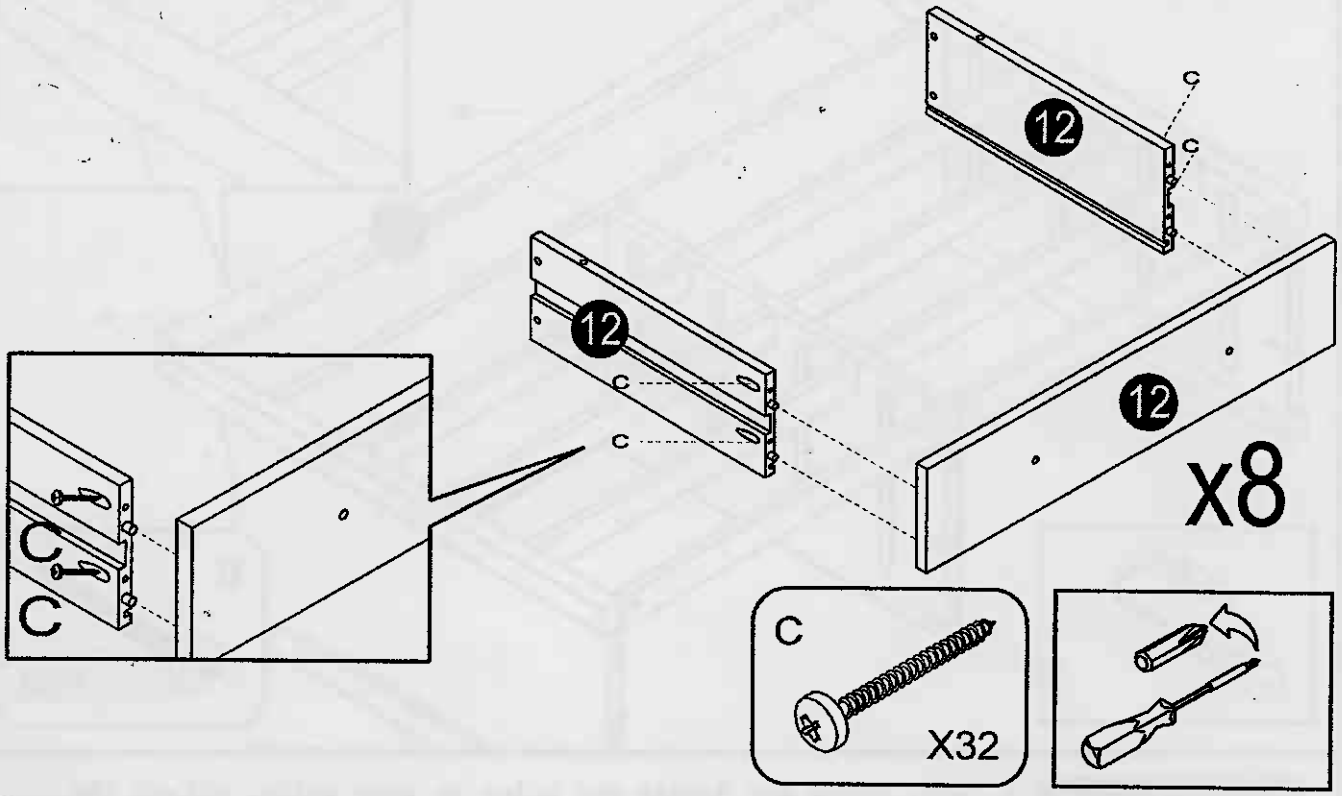

STEP 08

8. Slide in the drawer bottom (15) as shown.

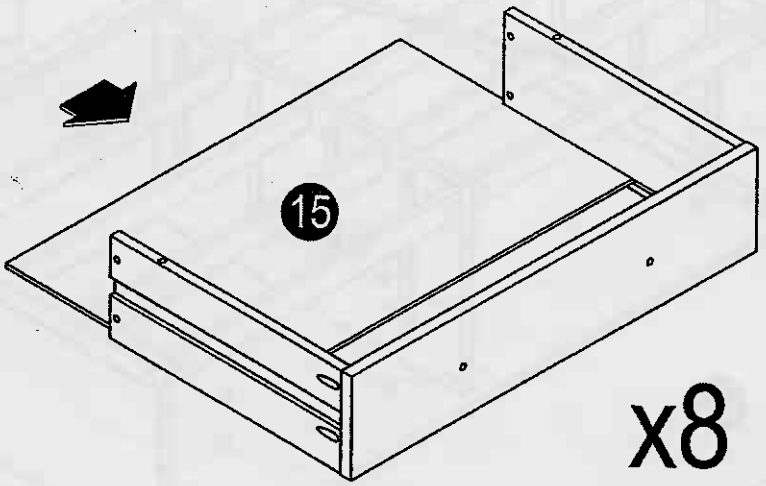

STEP 09

9. Align and attach the large drawer back (14) as shown using screws (C).

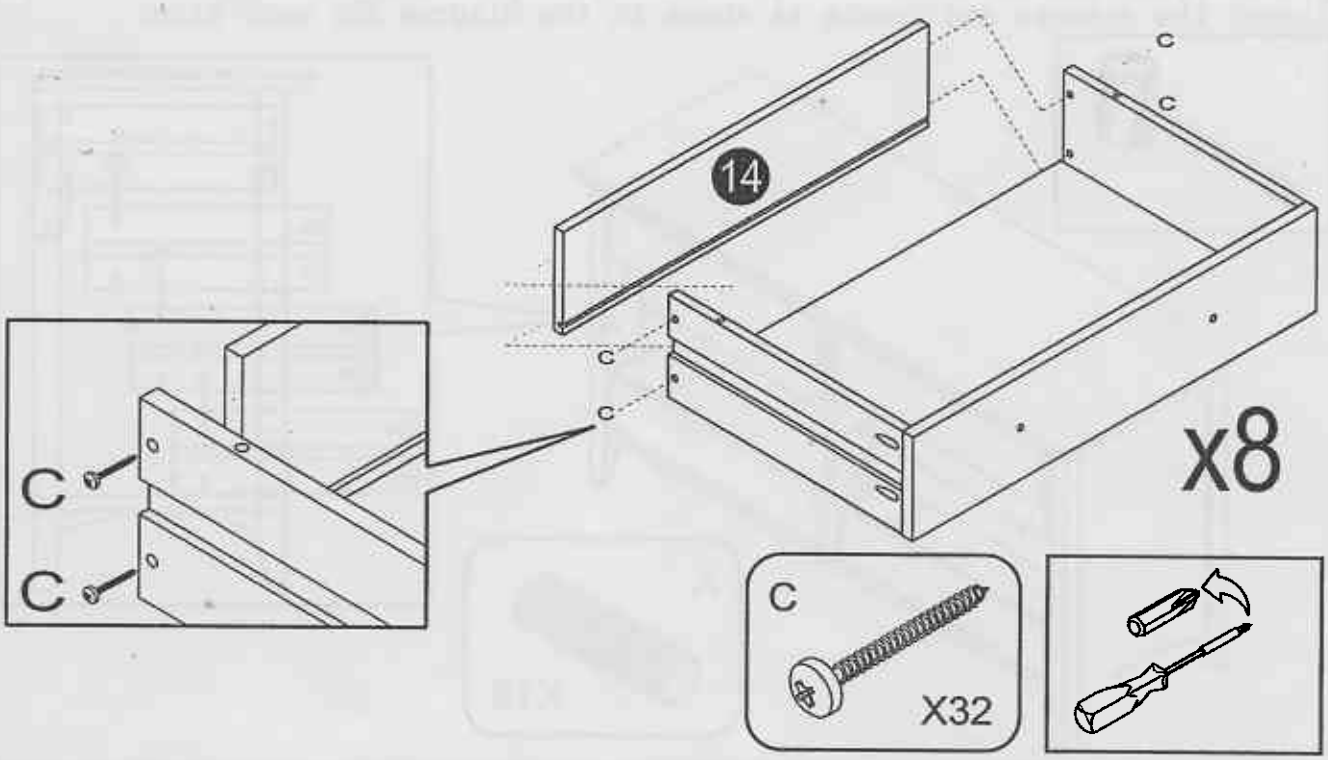

STEP 10

10. Attach the drawer knobs (E) using screws (C) as shown.

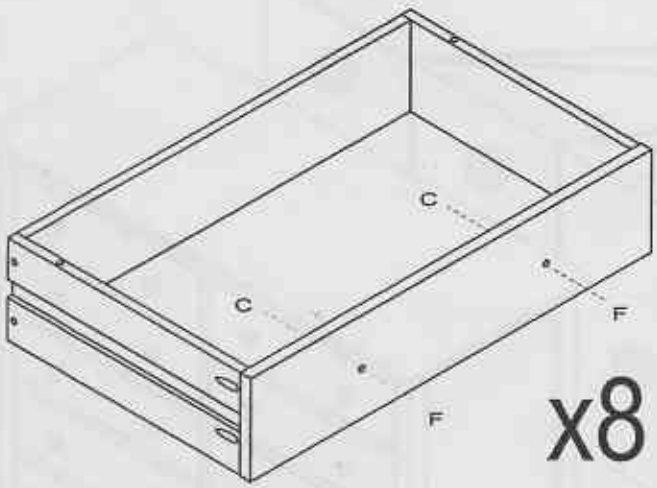

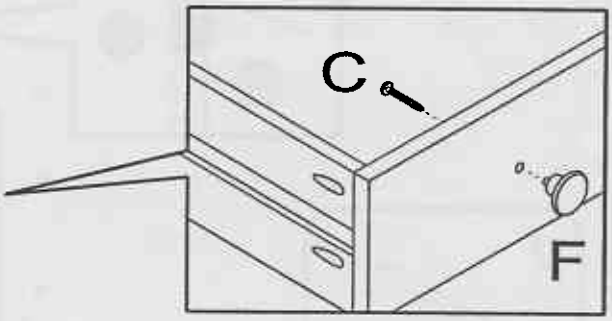

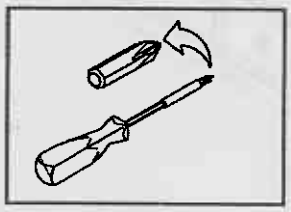

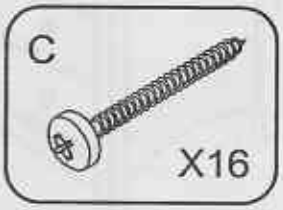

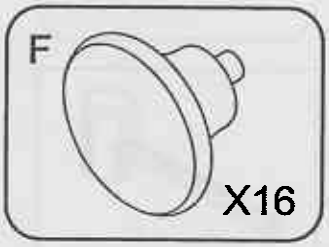

STEP 11

11. Will all of your drawers assembled, it is now time to insert them into your dresser. Please note the diagram shown in this step. Each drawer comes with an extra dowel (A) which acts as a drawer stopper. This prevent your drawer from falling out when fully extended. Simply insert the drawers and dowels as shown in the diagram for each side.

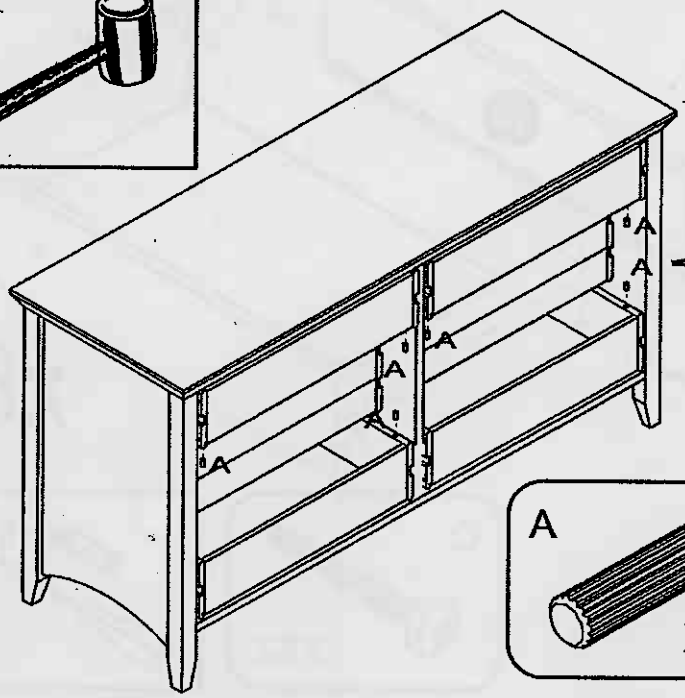

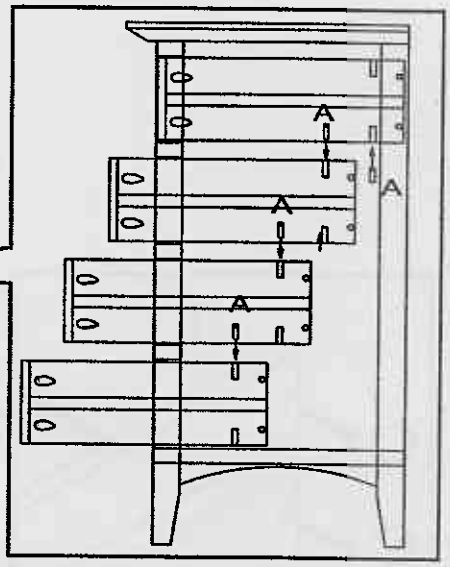

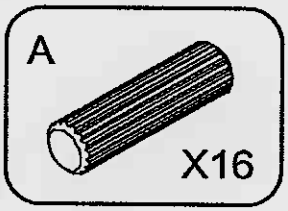

STEP 12

12. Align the back panels (08) and the panel connector (15) as indicated in the diagram. Secure with nails (D).